



USER MANUAL



- High voltage: 20x amplification up to +175V and -175V output voltage
- DC to 500kHz at (-3dB) large signal bandwidth and 100mA output current
- Very low noise: $\sim 800\mu\text{V}_{\text{rms}}$, and even lower with capacitive loads
- No overshoot with capacitive loads: bandwidth changes automatically to ensure stability
- Short-circuit protected output
- Adjustable DC offset

About this manual

This user manual is an integral part of the Falco Systems WMA-100 high voltage amplifier product. Please read it carefully and pay attention to the recommendations and instructions for safe use.

The WMA-100 amplifier: getting started

The Falco Systems WMA-100 model is a high quality, cost-effective, high voltage, linear laboratory amplifier. Its wide bandwidth and large voltage range make it an excellent choice for use with MEMS

devices, EO-modulators, piezo positioning systems, beam steering, ultrasonics, dielectric studies, and many other applications. It is designed to be fully stable and free of spurious signals with any capacitive load.

The amplification is 20x (fixed). The amplifier has a range of -175V to +175V, a large 500kHz @ -3dB signal bandwidth, a typical slew rate of 350V/ μs , and a noise level of $\sim 800\mu\text{V}_{\text{rms}}$. The short-circuit protection with a fast current limit of $\pm 100\text{mA}$ makes this amplifier suitable for both normal daily laboratory use and automated measurement systems.

Recommendations:

- Never apply more than +15V (-15V) to the amplifier input to prevent damage.
- A short voltage spike may appear at the output, when the amplifier is turned on or off. Pay attention not to damage sensitive circuitry or equipment already connected.
- The amplifier cannot be damaged by a short-circuit condition or capacitive loading, but avoid:
 - Connecting a charged capacitor to the input or output.
 - Connecting a highly inductive load to the output (such as a coil).
- Do not connect anything to the output that can act as an antenna.
- Use the amplifier within its specified 15 - 30°C ambient operating temperature range.
- Unplug the WMA-100 amplifier from the mains power before cleaning. Only clean this product with a soft, slightly moist cloth.

Safety

- This product is able to produce over 175V at more than 100mA at its output, which is a very high level (risk of electric shock). Safety measures should be taken accordingly. This is indicated by the sign



- above the output connector.
- This product is a Class I appliance which requires a mains connection with protective earth.
- Always position the WMA-100 amplifier such that the on/off power switch is easily accessible.
- The airflow to and from the WMA-100 amplifier should not be blocked or impeded, both at the front and the back side.
- The internal circuitry of the amplifier operates at high voltage. Only qualified personnel from Falco Systems should service this amplifier.
- Only replace fuses with the correct type:
 - 230V version of the WMA-100: 250V 250mA 5x20mm slow blow.
 - 115V version of the WMA-100: 250V 500mA 5x20mm slow blow.
- The Falco Systems WMA-100 amplifier is only suitable for indoor use in a class II environment (domestic, light industrial).
- Non-sinusoidal mains power generators cannot be used to power this product.

Detailed properties of the WMA-100 high voltage amplifier

Input

The input impedance of the WMA-100 high voltage amplifier is a 100kΩ resistor to ground, in parallel with 68pF to prevent electrostatic discharge (ESD) input damage. This resistor adds some noise to the output voltage unless a low-impedance source (e.g. a 50Ω output function generator) is connected to the input. The noise will be slightly higher when the amplifier input is left open.

The 100kΩ resistor also adds to the output offset voltage because the offset current of the input amplifier generates a voltage over this resistor.

A high-speed amplifier like the WMA-100 model can never be made fully insensitive to input overload conditions, as this would limit the performance of the amplifier significantly. For normal operation, input voltages should remain in the -8.75V to +8.75V range. This will result (with an amplification of 20x) in an output voltage swing of -175V to +175V.

Below -15V and above +15V, the input protection circuitry will limit the voltage being fed to the amplifier. In this case, the amplifier may be permanently damaged if the current of the source is not limited.

Output

The WMA-100 amplifier has been designed to be fully stable with all capacitive loads. It has been optimized for a perfect step-response, but it is also a very good linear and sine-wave amplifier.

The WMA-100 model has a clever feedback system, which ensures that no significant overshoot occurs at any capacitive load. The bandwidth of the amplifier is automatically reduced to ensure stability. Instability under capacitive loading conditions is a common problem of high-speed negative feedback amplifiers, often resulting in unwanted output overshoot voltages, and, in extreme cases, oscillations.



Figure 1. A 10x probe connected for monitoring the output signal

Short-circuiting this amplifier will not break down the amplifier, due to the extremely fast current limiting circuit that has been employed.

If output monitoring is required, it is recommended to connect a 10x oscilloscope probe to the output. A special BNC to probe tip connector is usually supplied with the probe (Fig. 1). However, the user can choose a different way of connecting the oscilloscope, as long as care is taken with the high output voltage. Using a non-coaxial cable can cause overshoot in the oscilloscope reading.

Noise

The noise of the amplifier ($\sim 800\mu\text{V}_{\text{rms}}$) is lowest when a low-impedance source is used, such as a pre-amplifier output or a 50Ω function generator output. An easy way to assess the noise performance of the amplifier, without picking up interference, is to connect a 50Ω coaxial load resistor to the input (Fig. 2). The noise voltage at the output can be measured using a sensitive amplifier.

The output noise will be lower when the bandwidth of the amplifier is reduced, which happens when a significant capacitive load is connected to the output (see Fig. 16 on page 12 for a detailed measured curve).

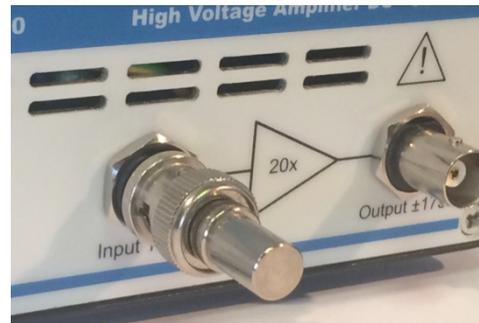


Figure 2. If assessment of the amplifier noise is necessary, connect e.g. a 50Ω coaxial load resistor to the input to provide a low-impedance input connection

Offset adjustment

The WMA-100 model provides an offset control knob to enable the amplifier to generate offset voltages over the full output range (Fig. 3). The offset control can be switched to 'Off' with a small rocker switch on the front panel to obtain the lowest noise and highest DC stability of the amplifier. Turning the offset control to 'On' enables the DC control knob. The DC offset voltage reacts to adjustments of this knob in a second. With the offset control turned to 'On', the noise voltage level of the amplifier becomes slightly higher: $\sim 950\mu\text{V}_{\text{rms}}$ instead of $\sim 800\mu\text{V}_{\text{rms}}$.

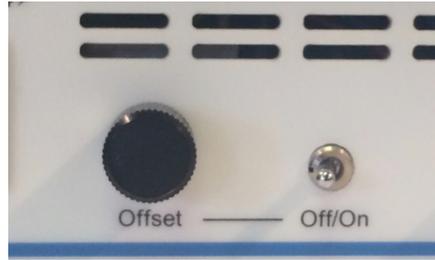


Figure 3. Offset circuitry 'On-Off' switch and offset control knob

The load

The output impedance of the WMA-100 model is 50Ω , to ensure stability with all capacitive loads. The amplifier is generally used for high-impedance applications where the load is capacitive. This is the case for MEMS devices, EO-modulators and piezo's alike. It should be noted that a coaxial cable itself also presents a capacitive load of approximately 100pF/m . The cable that is connected may limit the maximum usable current at high frequencies.

Matched loading with a 50Ω load circuit is possible by connecting a 50Ω resistor in series with the output to ground, but is not recommended. Excessively long cables will not distort the waveforms, but the disadvantage is a highly reduced voltage range (100mA in 50Ω gives 5V maximum output voltage instead of 175V maximum). With sensitive and/or high-frequency measurements, coaxial cables should be used for connecting both the input and the output, and their length should be minimized. If not, the cables will cause overshoot due to cable reflections (an effect related to the finite speed of light), and current limiting due to the cable capacitance. Although the amplifier itself remains fully stable, using less than 5 meter of output cable is recommended for the WMA-100 amplifier to obtain optimal results.

Transmitter mode

This amplifier can generate a significant amount of power at frequencies used for radio transmission and reception. The amplifier should not be used for telecommunication as described in the R&TTE directive 95/5/EC. Always use coaxial cables.

Amplifier characteristics

In the following pages, several amplifier characteristics are illustrated:

- Frequency response as a function of capacitive load (Fig. 4, 5)
- Sine and triangle wave responses (Fig. 6, 7)
- Square wave response (Fig. 8, 9, 10)
- Step response (Fig. 11)
- Capacitive load dependency of square wave output (Fig. 12)
- Noise with and without offset control engaged (Fig. 13, 14)
- Cumulative output noise spectrum (Fig. 15)
- Rms output noise voltage versus capacitive load (Fig. 16)

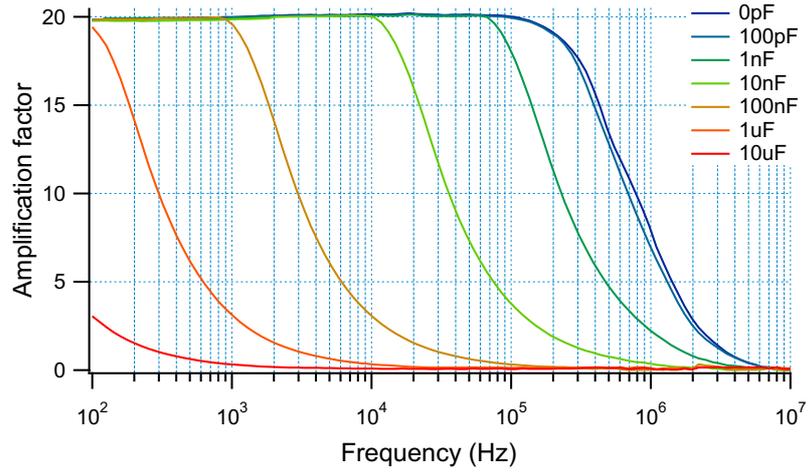


Figure 4. Frequency response at 300V_{pp} output voltage with different capacitive loads

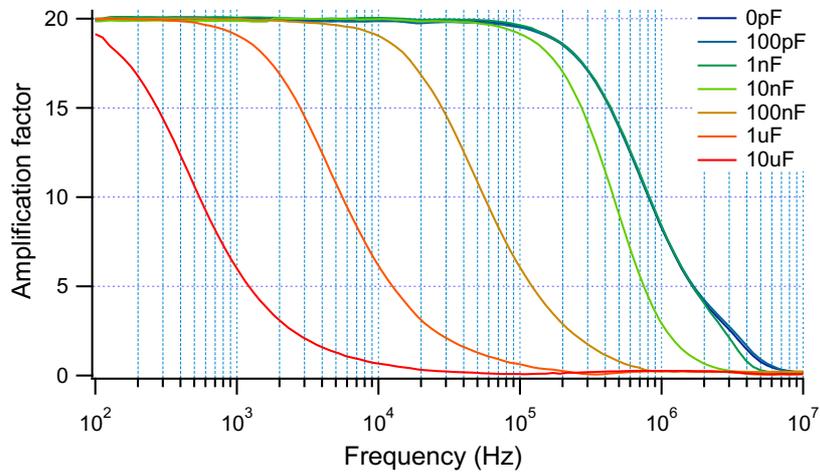


Figure 5. Frequency response at 1V_{pp} output voltage with different capacitive loads

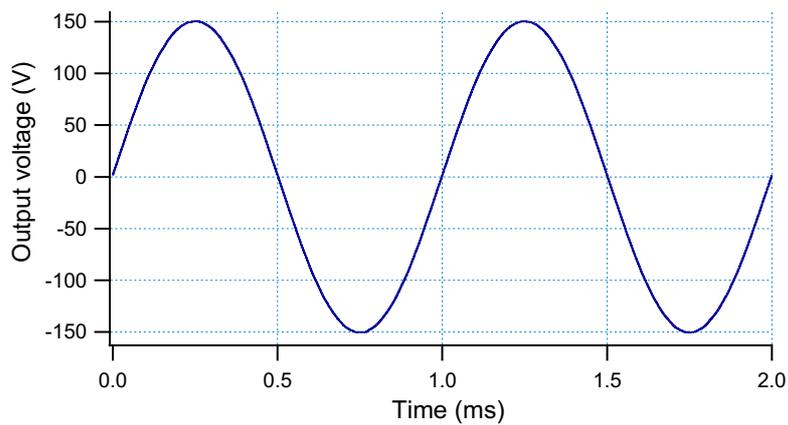


Figure 6. Sine wave 300V_{pp} 1kHz

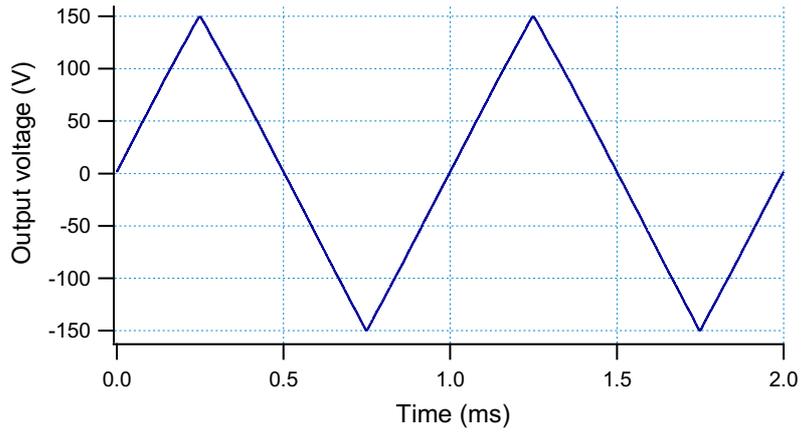


Figure 7. Triangle wave 300V_{pp} 1kHz

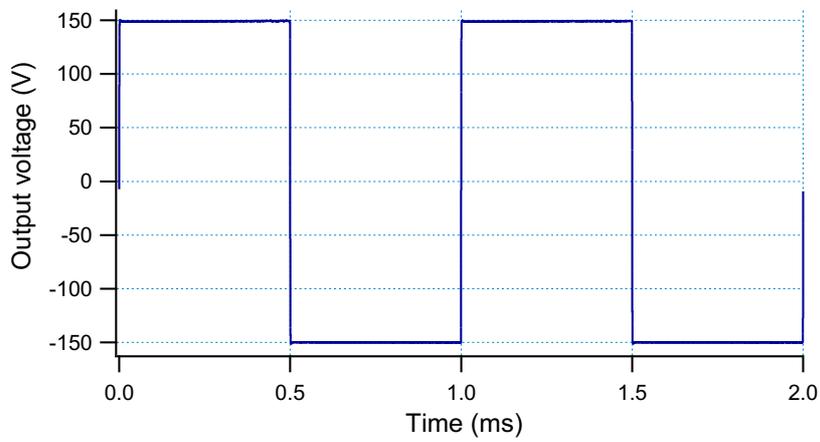


Figure 8. Square wave 300V_{pp} 1kHz

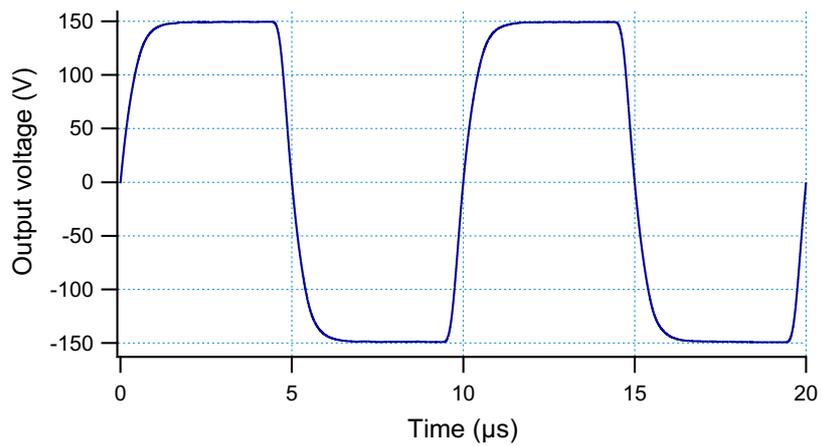


Figure 9. Square wave 300V_{pp} 100kHz

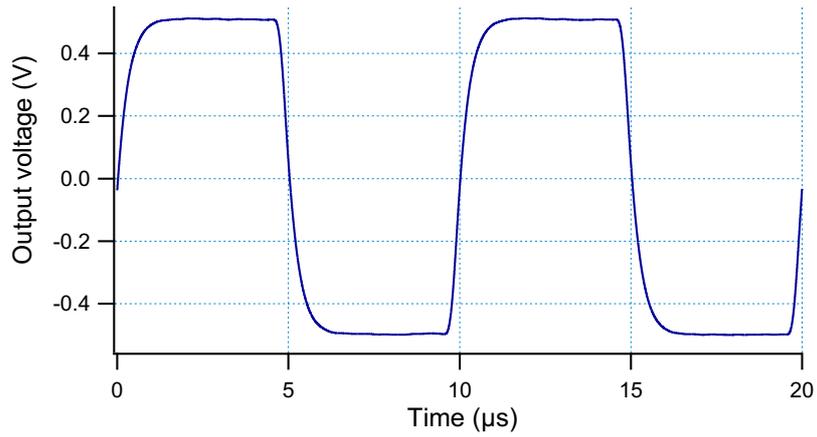


Figure 10. Square wave 1Vpp 100kHz (small signal response)

In Figure 11 the unipolar and bipolar step response are shown

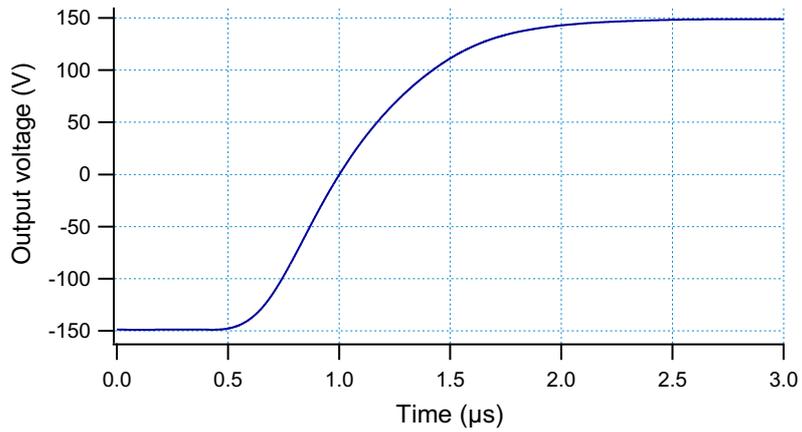


Figure 11a. 300Vpp step response 10-90%: up in 1.0μs

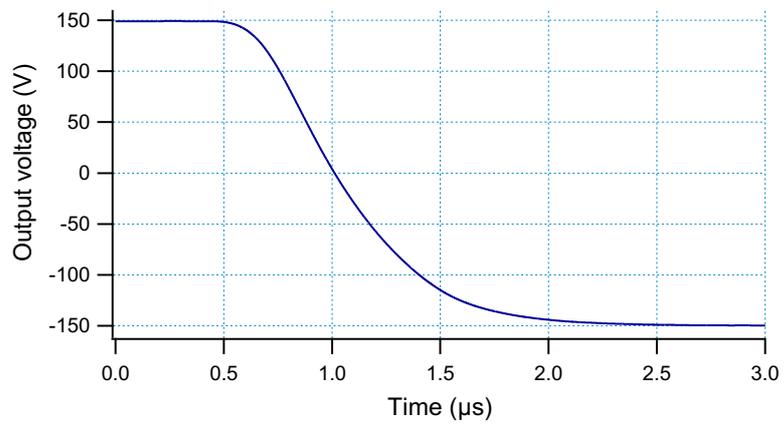


Figure 11b. 300Vpp step response 10-90%: down in 0.9μs

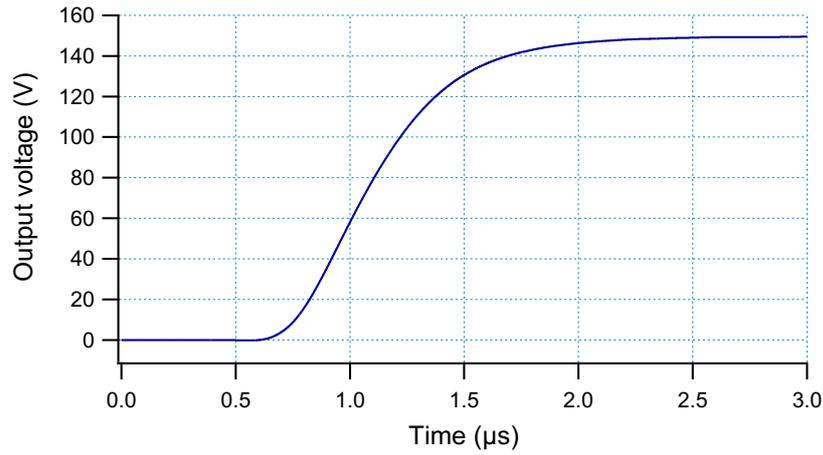


Figure 11c. 0 to 150V step response 10-90%: up in 0.8μs

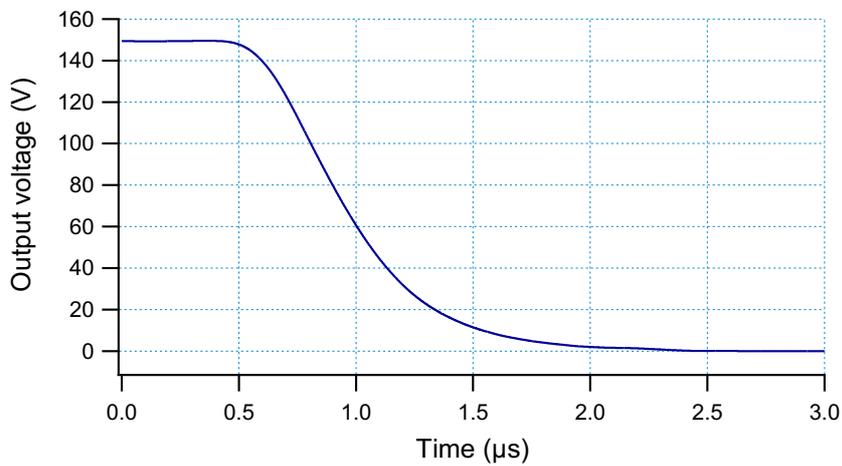


Figure 11d. 150 - 0V step response 10-90%: down in 0.8μs

In Figure 12 the 300Vpp square wave response under different capacitive loading conditions is shown. The 100mA current limit limits the speed at which the capacitor can be charged.

The bandwidth adjustments of the amplifier with different capacitive loads preventing overshoot are clearly visible. Note the difference of the horizontal timescale in the figures.

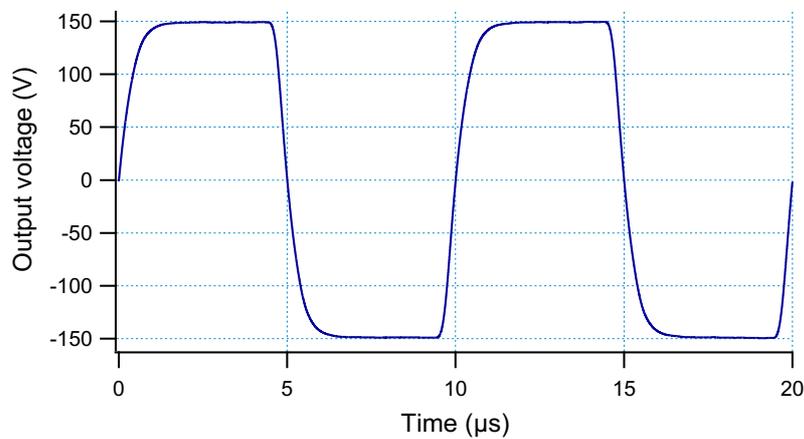


Figure 12a. 0pF load

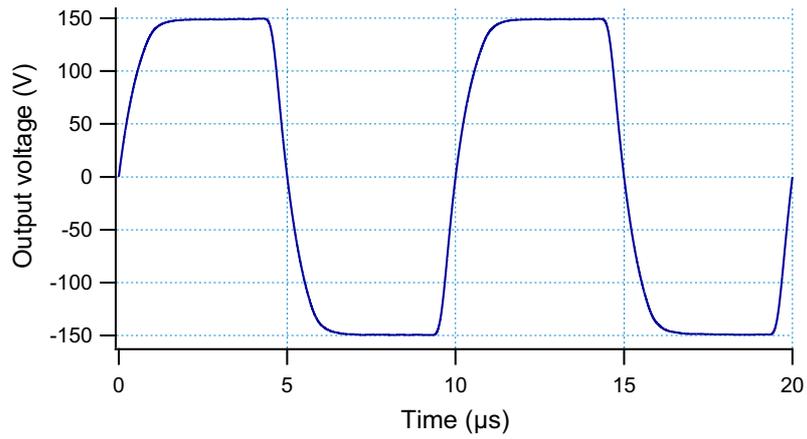


Figure 12b. 100pF load

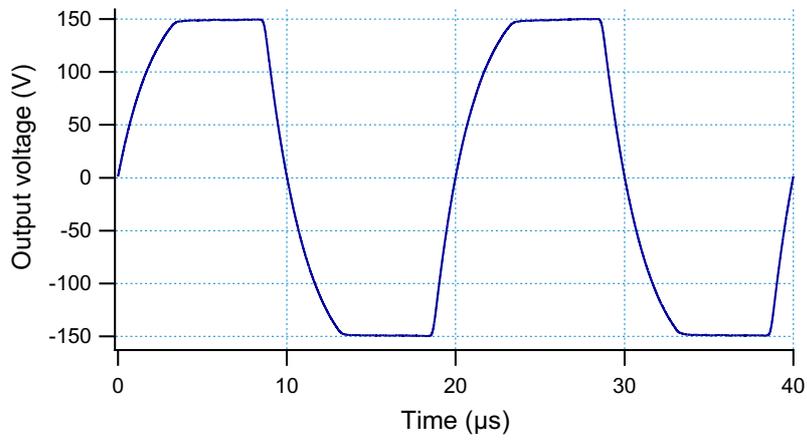


Figure 12c. 1nF load

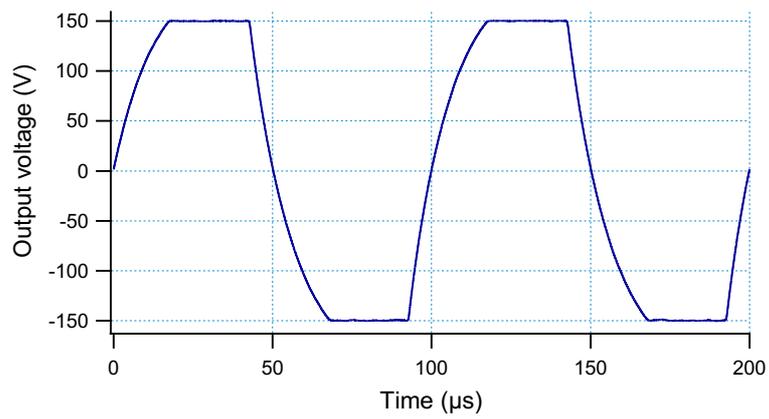


Figure 12d. 10nF load

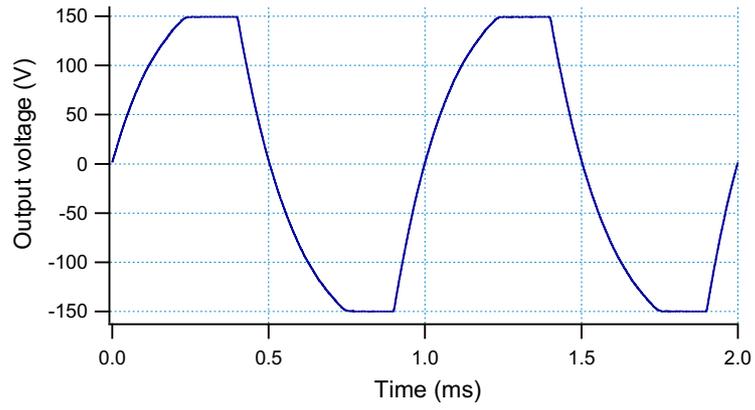


Figure 12e. 100nF load

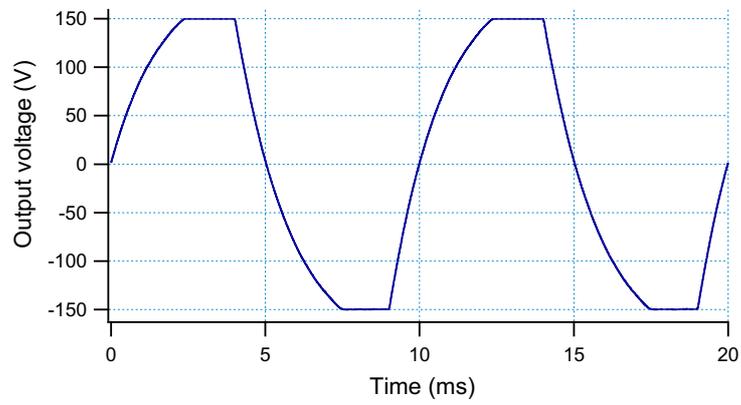


Figure 12f. 1µF load

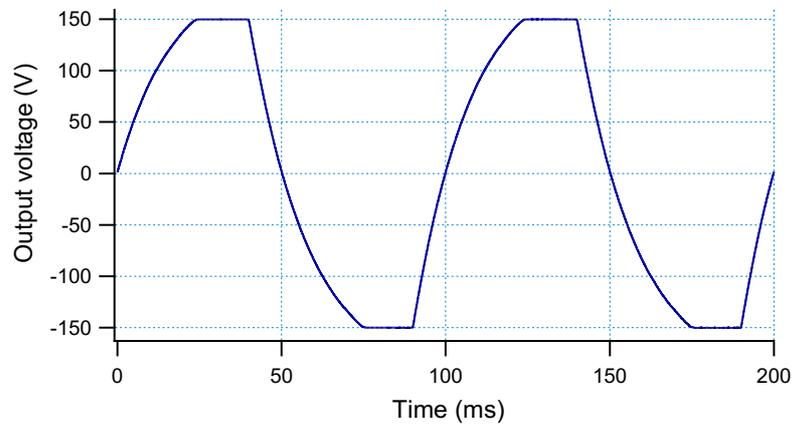


Figure 12g. 10µF load

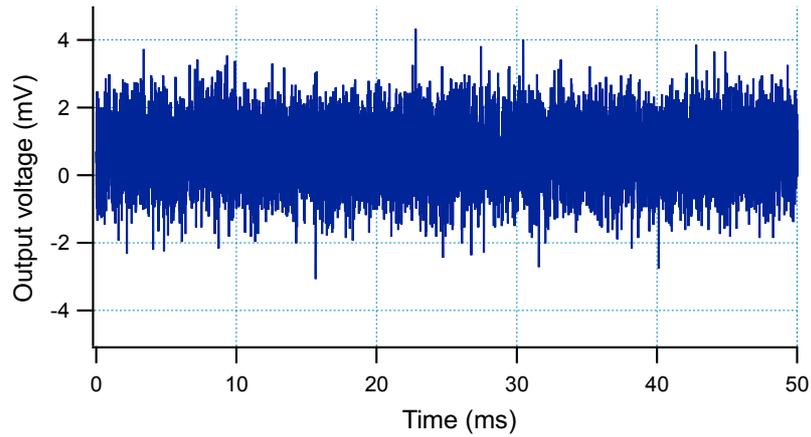


Figure 13. Noise ($\sim 800\mu\text{V}_{\text{rms}}$ measured with a true rms voltmeter) with the offset control switched to 'Off'. The noise may appear to be higher than shown here if the amplifier input is not connected to a low-impedance source.

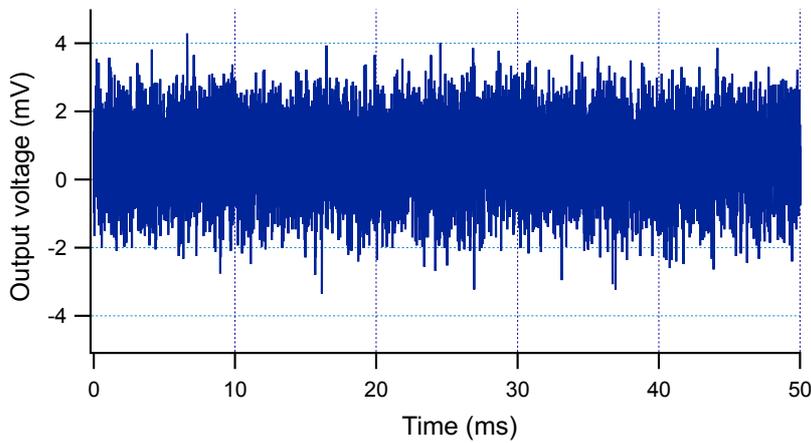


Figure 14. Noise ($\sim 950\mu\text{V}_{\text{rms}}$ measured with a true rms voltmeter) with the offset control switched to 'On'. In addition to the noise the short-term drift of the offset is around 5mV.

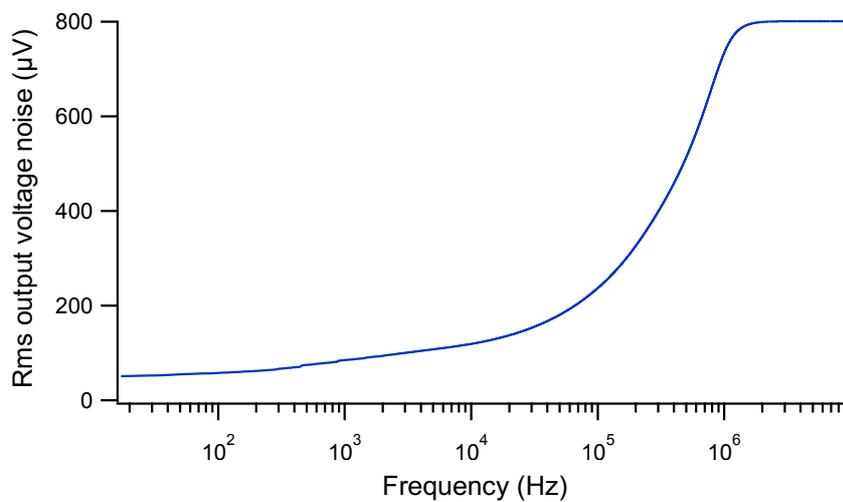


Figure 15. Cumulative output voltage noise as a function of maximum frequency

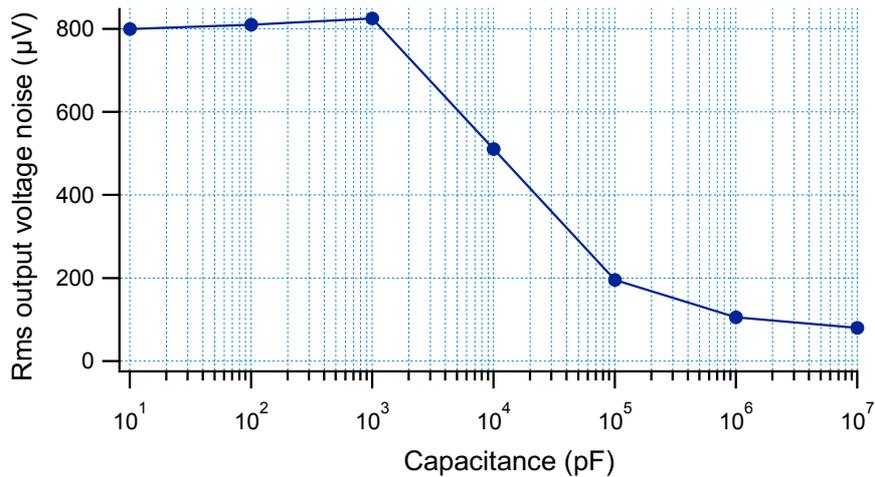


Figure 16. Rms output noise voltage versus capacitive load with offset control switched 'Off'

Technical specifications

Amplification: 20x, fixed
Bandwidth: DC – 500kHz @ -3dB large signal bandwidth
Slew rate: 350V/µs typical
Output voltage: -175V to +175V
Current: 100mA typical with limiter
Noise and offset: 800µV _{rms} output noise typical, 70mV DC offset typical
Input impedance: 100kΩ
Output impedance: 50Ω
Stability: stable with all capacitive and resistive loads, no overshoot > 5%
Power: 230V 50Hz AC, 50W or 115V 60 Hz AC, 50W
Mains fuse: 2x 0.25A 250V slow blow (230V version) or 2x 0.5A 250V slow blow (115V version)
Safety: Class I - requires mains power connector with protective earth
Overvoltage: Category II
Operating temperature: 15 – 30°C
Storage temperature: 0 – 60°C
Relative humidity: 30 – 70% non-condensing
Maximum usage height: 2000m
Dimensions: 52 x 165 x 220mm
Weight: 2.5kg
Country of origin: The Netherlands
HS code: 8543 70 90

Specifications may be subject to change.

Harmonized standards

This product complies with the following standards:

Safety: EN61010-1
EMC: EN61326
FCC: 47 CFR 15



WEEE and RoHS

Do not dispose of the WMA-100 amplifier as standard waste, but discard it at a WEEE electronic waste collection point. The amplifier has been built in compliance with the RoHS directive.

Warranty

Falco Systems products are guaranteed against malfunction due to defects in materials or workmanship for a period of 1 year from the date on the invoice.

If a malfunction occurs during this period, the product will be repaired or replaced without charge. The product will be returned to the customer free of charge.

The warranty does not apply to:

- Exterior finish or appearance.
- Malfunction of the product resulting from use or operation in other ways than specified in the user manual.
- Malfunctioning due to misuse or abuse of the product.
- Malfunctioning occurring after changes or repairs have been made by anyone other than Falco Systems.

To obtain warranty service, inform Falco Systems via info@falco-systems.com. You will receive support and further instructions.

Falco Systems will not be liable for any consequential damages, including, without limitation, devices or equipment connected to the product, injury to persons or property or loss of use. For more details see the Falco Systems Standard Terms and Conditions of Sale, which can also be downloaded on www.falco-systems.com

User manual version

User manual version: 3.2
Date: January 21, 2020

Falco Systems

Falco Systems BV
Remisestraat 1
2225 TH Katwijk aan Zee

Phone: +31 (0)6 21840996
Email: info@falco-systems.com
Website: www.falco-systems.com